

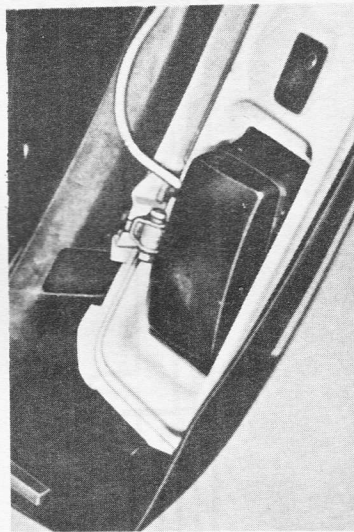


Fig. 9.12. Auxiliary headlamps - 1975 models onwards

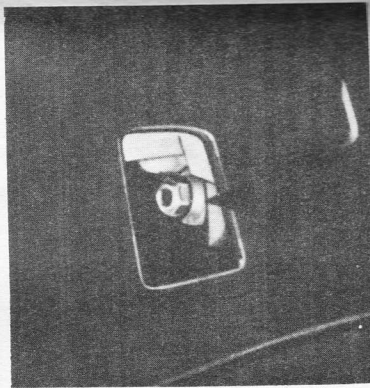


Fig. 9.13. Mounting screw for auxiliary headlamps, 1975 models onwards (arrowed)

6 Draw out the lamp then pull off the rubber protector and electrical connector.

7 Installation is the reverse of the removal procedure. To prevent corrosion of the terminals, apply a little petroleum jelly to them.

19 Tail light cluster

Bulb renewal

1 Remove the three plastic nuts from the rear of the light cluster then pull off the lens from outside the car (photos).

2 Remove the bulb(s).

3 Installation is the reverse of the removal procedure.

Lamp cluster removal

4 Remove the four nuts and lockwashers, and withdraw the lamp assembly, disconnecting the electrical connector as soon as practicable.

5 Installation is the reverse of the removal procedure.

20 License plate (number plate) lamp

1 To remove the bulb only, take out the two screws and remove the lens so that the bulb can be removed.

2 If the complete lamp is to be removed, additionally remove the electrical connections so that the bracket can be detached.

3 Installation is the reverse of the removal procedure. Ensure that the rubber seal is correctly positioned before tightening the screws.

21 Interior light - bulb renewal

1 Disconnect the battery ground strap.

2 Using a screwdriver, carefully press in the retaining clip and pull out the light from the bracket (photo).

3 Installation is the reverse of the removal procedure.

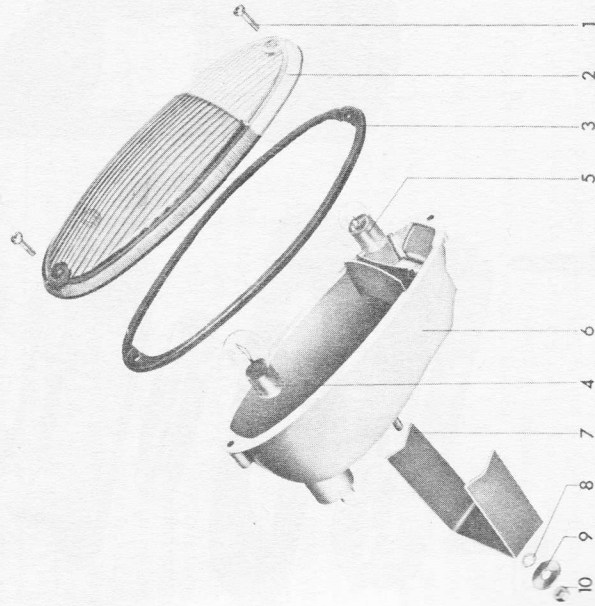


Fig. 9.15. Front direction indicator and side marker lamps

1 Cheeshead screw

2 Lens (early type shown)

3 Rubber seal

4 Bulb

5 Bulb

6 Lamp carrier


7 Clamp

8 Spring washer

9 Washer

10 Nut

Fig. 9.16. Front direction indicator
31 Ground (earth)
58 Side marker lamp connection
49 R/L direction indicator connection

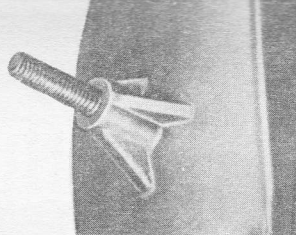

24 Relay plate - removal and installation

1 Pull off the electrical plug connector (mounted on the left side of the engine compartment).

2 Remove the two self tapping screws from the clips at the front of the relay plate.

3 Installation is the reverse of the removal procedure.

25 Fuse box and relays - removal and installation

1 Disconnect the battery ground strap.

2 Remove one screw at each end of the relay box and pull the relay out of the socket (photo).

3 To remove the turn signal and horn relays, remove the turn signal and horn relays from the fuse box.

4 Installation is the reverse of the removal procedure.



Fig. 9.17. One of the headlamp aim adjuster screws

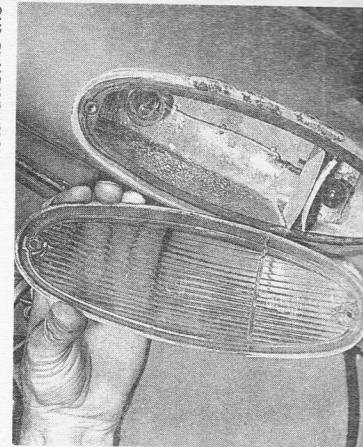


Fig. 9.18. Removing the direction indicator lens



Fig. 9.19. Removing the front direction indicator