


Additional current flow diagram, electric wiper pump, Type 914

9

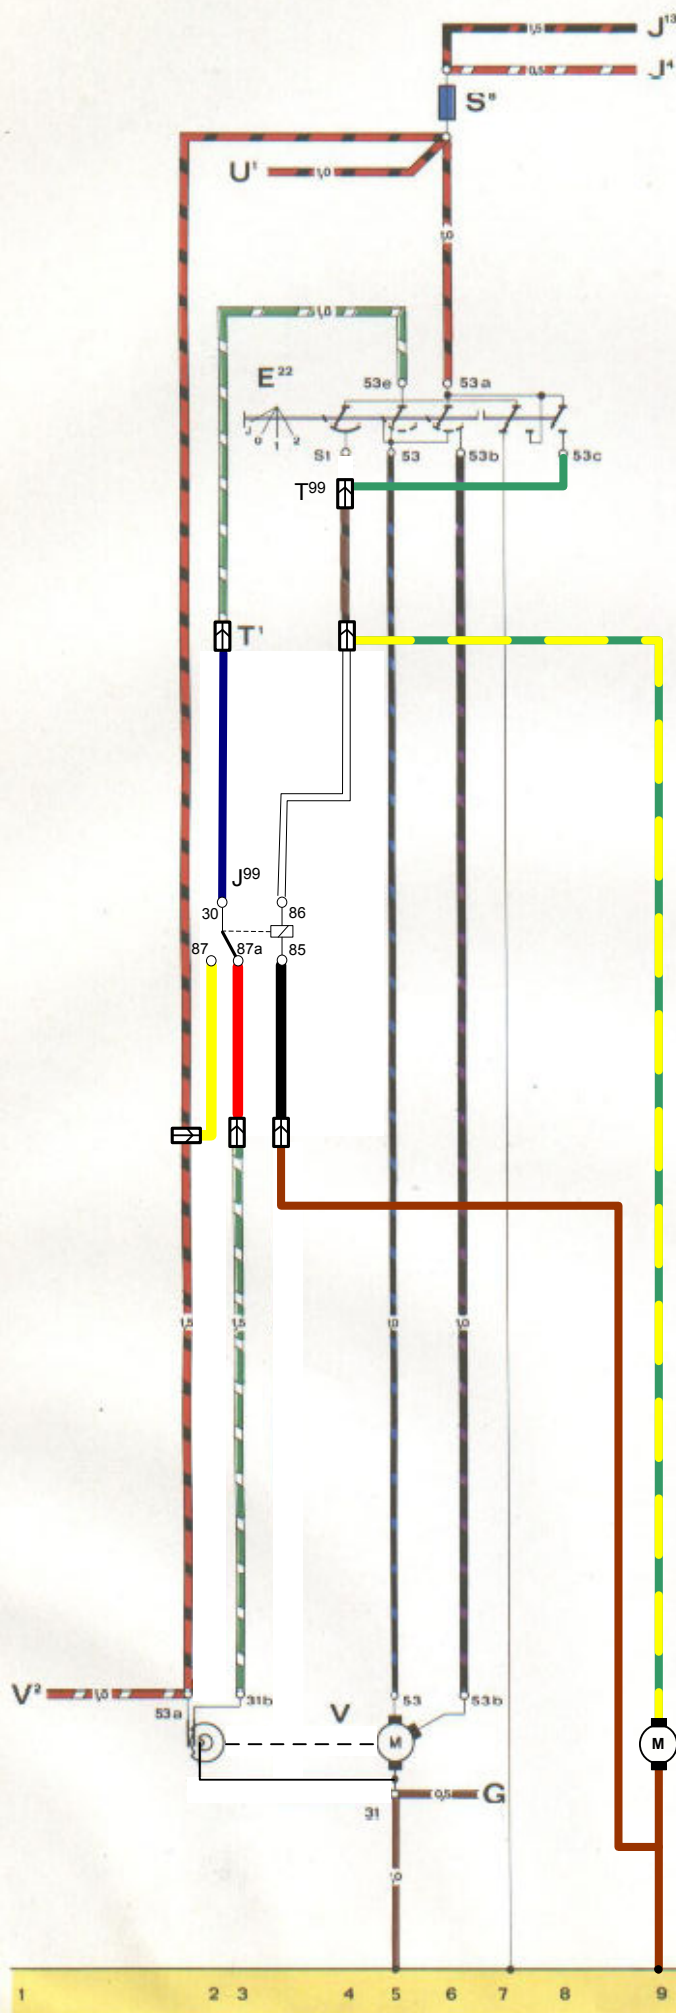

Description

E²² — Windshield wiper switch, interval type

G — to indicator for fuel gauge

J⁴ — to horn relay

J⁹⁹ — Regular relay

J¹³ — to relay for fresh air blower, front

S⁸ — Fuse in fuse-box

T¹ — Single connector (near fuel tank)

U¹ — to cigarette lighter

V — Windshield wiper motor

V² — to fresh air blower, front

V⁹⁹ — Washer Pump

T⁹⁹ — Single connector, 2.8mm added to wiper switch

current track

4, 5, 6, 7, 8

7

9

2, 3, 4

9

6

2

3

2, 5

1

9

4

V⁹⁹
Washer Pump