



VW / Porsche Type 4
engine
Oil sump extension kit
from
boatyardbuses@aol.com



VW / Porsche Type 4
engine
Oil sump extension kit
from
boatyardbuses@aol.com



VW / Porsche Type 4
engine

Oil sump extension kit
from

boatyardbuses@aol.com

Drill out hole in oil strainer to
accommodate mounting bolt



VW / Porsche Type 4
engine

Oil sump extension kit
from

boatyardbuses@aol.com



VW / Porsche Type 4
engine
Oil sump extension kit
from


boatyardbuses@aol.com

Drill out hole in oil strainer to
accommodate mounting bolt



VW / Porsche Type 4
engine
Oil sump extension kit
from

boatyardbuses@aol.com

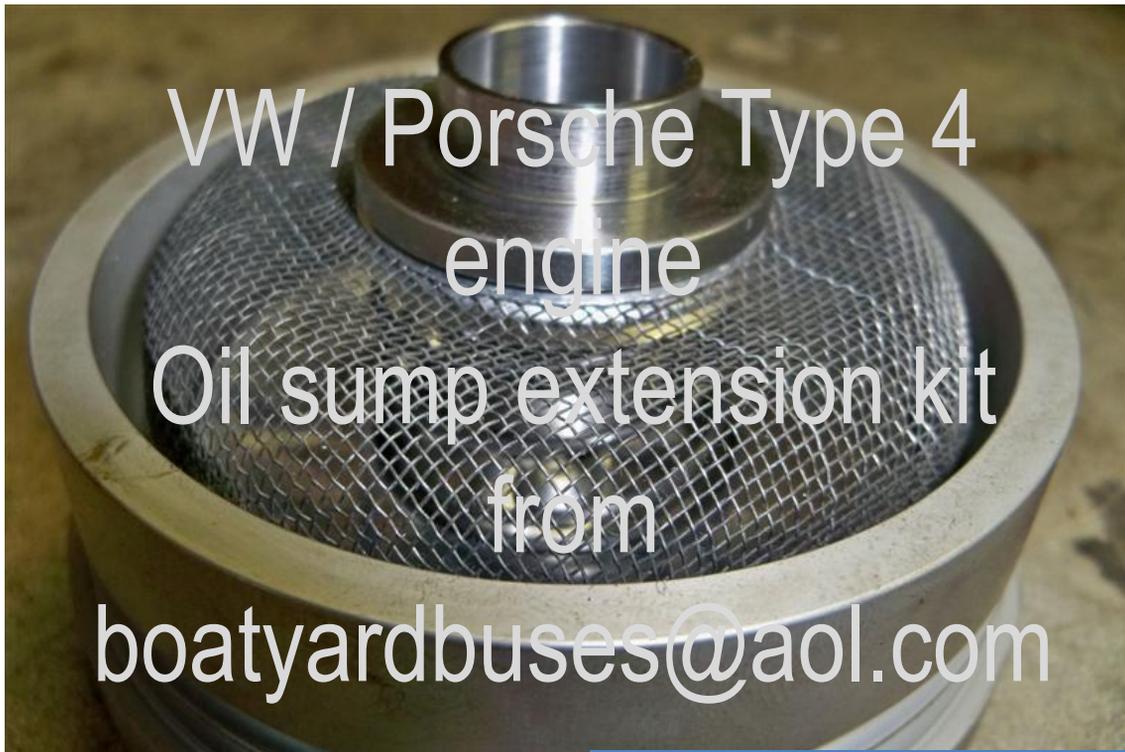

VW / Porsche Type 4
engine

Oil sump extension kit
from

boatyardbuses@aol.com

There should be 5-6mm between the oil pick up extender tube and the bottom of the sump

Place the new oil pick up tube 5-6mm onto the original tube. Secure with gasket sealant (or weld/braze if preferred)



VW / Porsche Type 4
engine

Oil sump extension kit
from

boatyardbuses@aol.com